

Quick Setup Guide Zoom IR




AT-15Z

WIRING


OPTION 1 Constant ON

AXTON Illuminators have been designed and tested to run 24/7 continuously both indoors and outdoors.

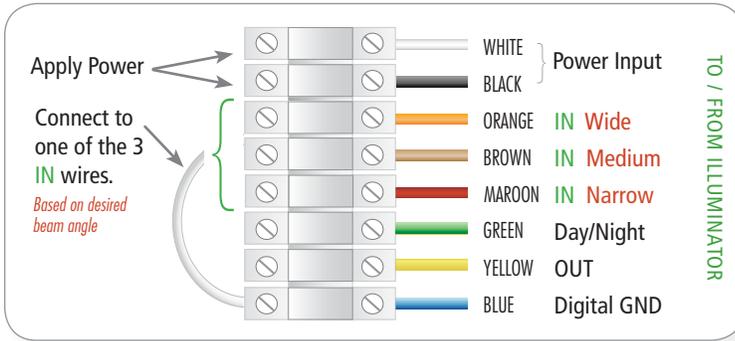


OPTION 2 Automatic

Illuminator will trigger ON/OFF using the built in ambient light sensor which has been pre-set to a threshold of 5-15 lux. ON will trigger immediately while OFF will trigger after a 12-18 second delay.

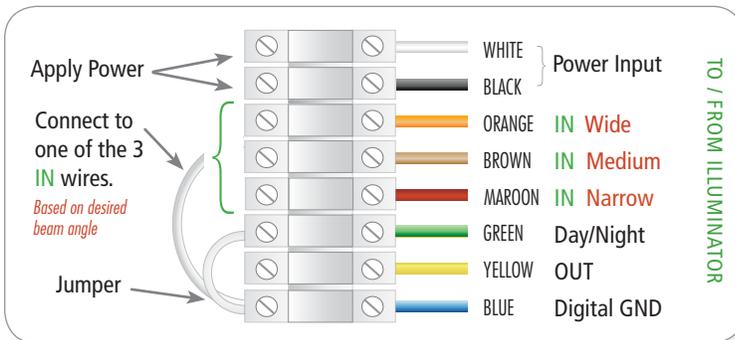

OPTION 3 External Controller (i.e. Camera)

You will need to log into the camera via computer and program the I/O ports to trigger when IR illumination is desired.

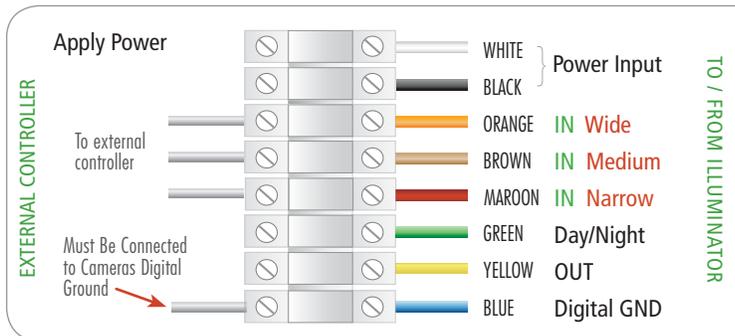

To activate desired angle the corresponding output on the external controller must be set to active low.

Possible external controllers are: computer, motion sensor, door contact sensor and others.



! Make all electrical connections **BEFORE** applying power.

Voltage Input Configurations

24V AC/DC

Polarity NON-Sensitive

Applying voltage other than the required range may cause permanent damage and VOID WARRANTY.

WARNING! Infrared light is not visible. Do not view directly with optical instruments (magnifiers) or stare directly into the illuminator at close distance.

Do not attempt to open or modify the light as this will void the warranty. If you need a modification, electric or physical, contact us directly. We will let you know if it can be done. All changes **MUST** be made at our factory.



? QUESTIONS ? (801) 519-0500 or support@axtontech.com | axtontech.com



801 West Robinson Drive, Suite 500, North Salt Lake, UT 84054
 ☎ 801/519-0500 📠 801/519-0501 ✉ sales@axtontech.com

